


## POP-UP INSTALLATION INSTRUCTIONS

Your item may appear slightly different from the illustration


Add Teflon to the Thread

Add Plumbers Putty between  
the Gasket and Sink

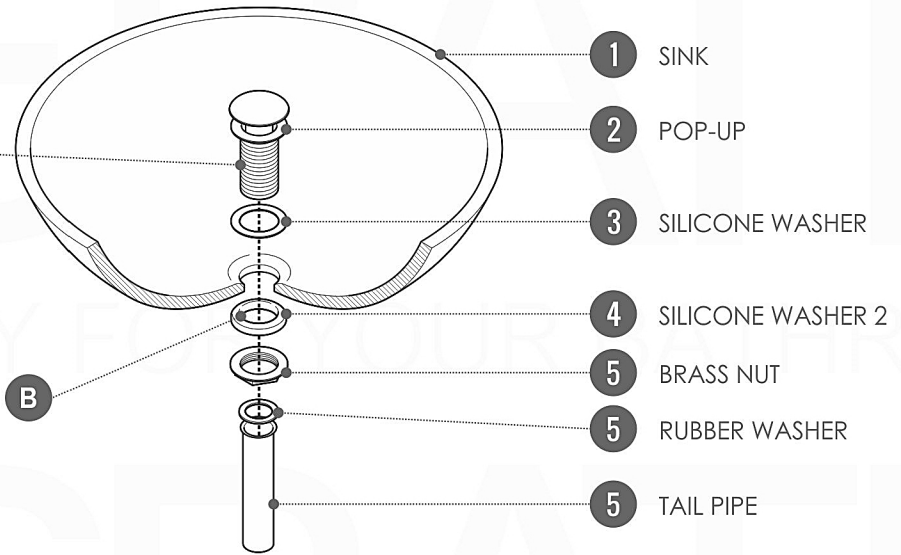


### POP-UP INSTALLATION

FOR SINKS WITHOUT OVERFLOW  
#SKU: P101-NO

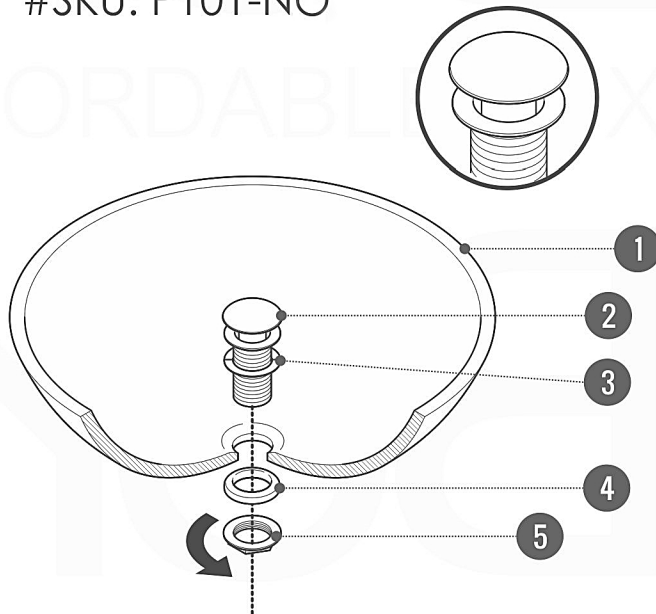

FOR SINKS WITH OVERFLOW  
#SKU: P101

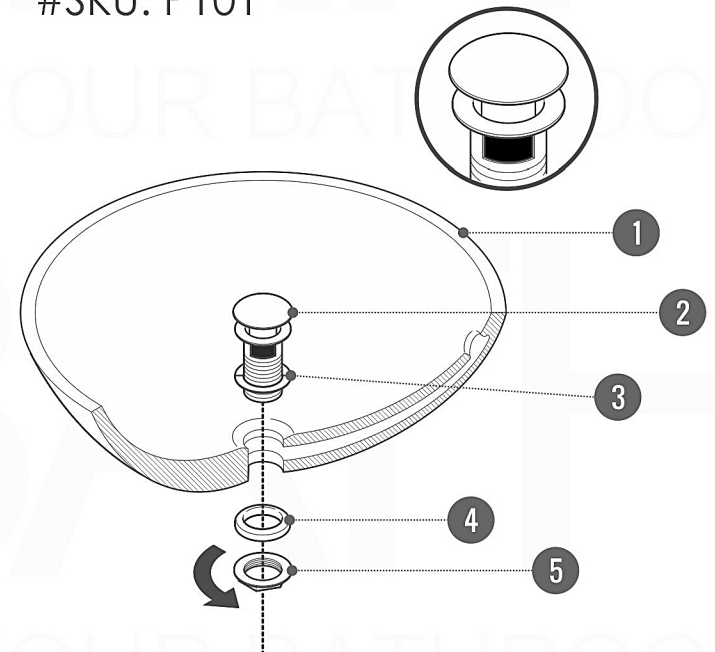

**OR**